

How to Turn on Your DirecTV Box and Your TV Set to See Local Channels (channels 2, 6, 8, etc.) – 20 Apr 2017

1. To turn on the DirecTV box, slide the button on the top of your remote to the FAR LEFT – to the DirecTV setting symbol.



This is the DirecTV setting symbol.



2. Point your remote control toward the cable box and press the **ON button on the remote control. You will know the box is on when the blue light appears.**



You will know the box is on when the blue light appears.


Go to the next page



3. To turn on your TV so that you can see the local channels. Slide the button on the top of your remote to the FAR RIGHT – to the TV setting symbol.



4. Point your remote control toward the TV and push the ON button.

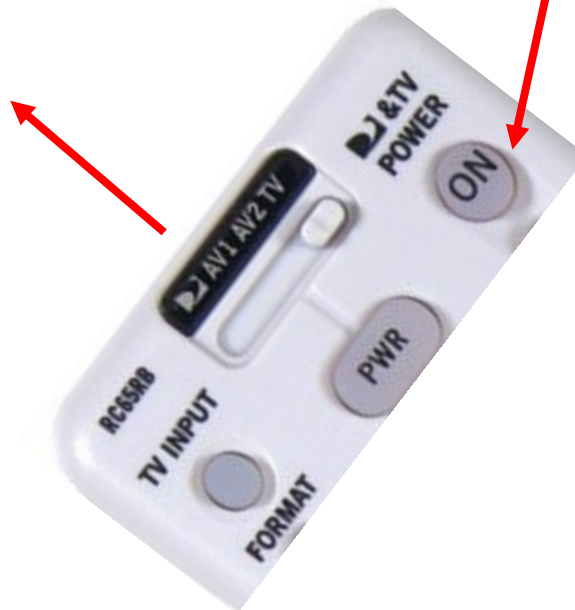


Go to the next page

Your TV gathers information from many sources – **these are all called INPUT** – NOT EVERYONE USES ALL INPUT SOURCES – these are some of the possibilities:

- your DirecTV box
- the cable from the wall
- a DVD player (if you have one)
- a DVR box (if you have one)
- a VCR (if you have one)
- your computer

YOU must tell your TV which one of these INPUT sources you want to use at this time.
READ STEP 5 to learn **how to tell your TV which INPUT source** to use to see the local channels.

5. Point your remote control toward the TV and push the TV INPUT button.

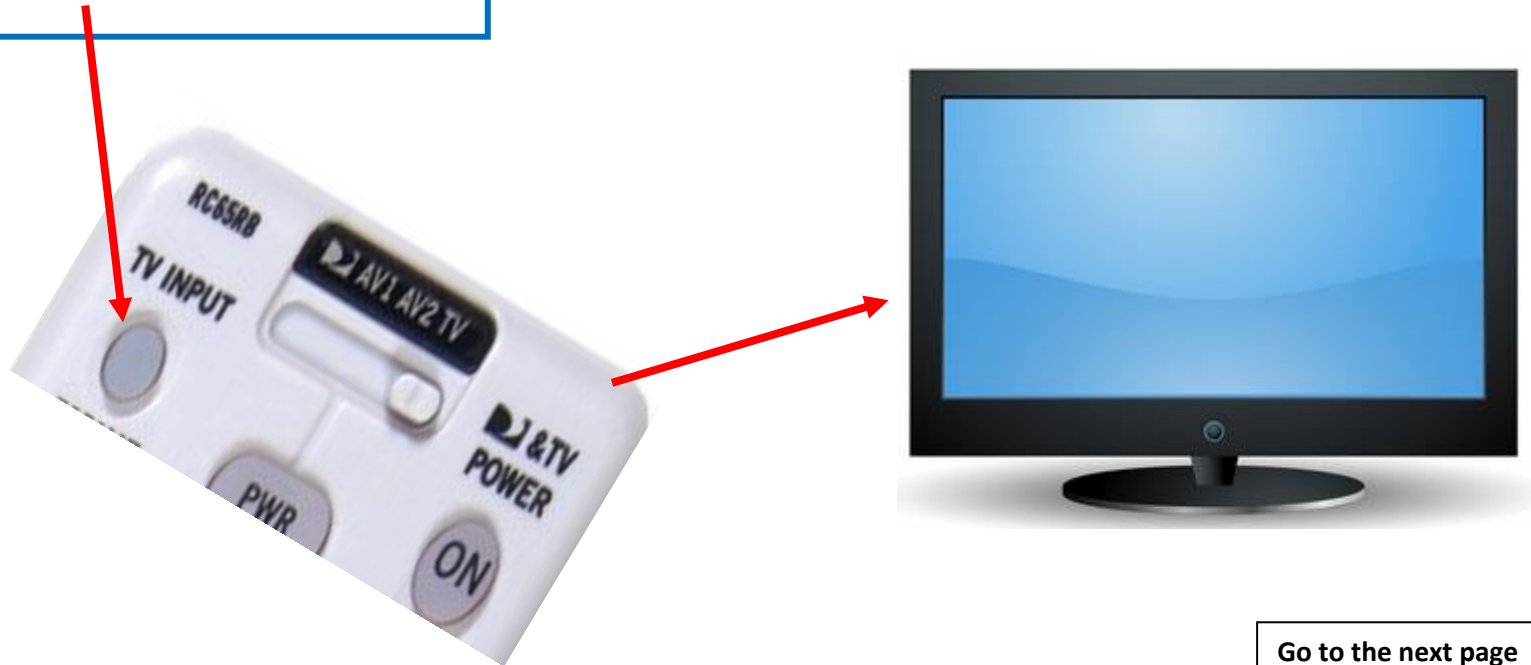

Go to the next page

There are MANY types of TVs – each one displays the **INPUT** possibilities differently – yours may look different from the TV used in the classroom. Here are some examples – the INPUT display on **YOUR TV may look different:**

TV
HDMI
HDMI – DirecTV
Component 1
AV1
AV2

TV HDMI HDMI - DirecTV Component 1 AV1 AV2

TV	AV1	AV2	Component 1
HDMI 3	HDMI2		



6. Point the remote toward the TV and push the input button multiple times to move UP or DOWN or LEFT or RIGHT until **TV is highlighted.**

TV
HDMI
HDMI – DirecTV
Component 1
AV1
AV2


7. When **TV is highlighted – STOP – take your finger off the button**

Point the remote toward the TV and use the number buttons near the bottom of the remote to choose one of the local channels – 2, 6, 8 or one of the others on the local channel guide.



If it won't work, call 877-598-6636.

How to Change from Watching Local Channels (channels 6 and 8) to Watching DirecTV channels

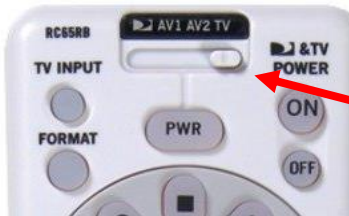

1. Keep the slide on the top of your remote control on the **FAR RIGHT** – on the **TV** setting.

2. Point the remote toward the TV and push the **TV INPUT** button.



There are **MANY** types of TVs – each one displays the **INPUT** possibilities differently – yours may look different from the TV used in the classroom. Here are some examples – the **INPUT** display on **YOUR TV** may look different:

TV	HDMI	HDMI - DirecTV	Component 1	AV1	AV2
----	------	----------------	-------------	-----	-----

TV	AV1	AV2	Component 1
HDMI 1	HDMI2		

3. Point the remote toward the TV and push the input button multiple times to move **UP** or **DOWN** or **LEFT** or **RIGHT** to find the setting for DirecTV – then **STOP** – take your finger off the button.

NOTE: YOUR TV may not say “DirecTV” – it may say HDMI – OR it may be one of the other choices – you may need to try several possibilities until you find the **INPUT** for DirecTV.

- TV
- HDMI
- HDMI – DirecTV
- Component 1
- AV1
- AV2



4. **MOVE THE SLIDE ON THE TOP TO THE FAR LEFT** – to **Direct TV** – then use the channel up and down button to change channels – or enter the number of the DirecTV channel you want to watch.



If it won't work, call 877-598-6636.